

ALPHABETICAL INDEX

	page		page		page	
A			D			
Accelerator lever	54	Breather details	36	Dash millboard	156	
Accumulator piston	68	Brush set	127	Dash panel	132	
Air cleaner pipe	40	Buffer assembly	90	De-mister assembly	161	
Air jet, G.A.	44	Bumpers	115	Diaphragm	26	
Air silencer	40	C			Differential wheel	96
Annulus	70	Cam assembly	126	Dipping switch	129	
Apron motif	148	Camshaft	16	Dipstick, engine	22	
Armature	127	Carburettor	42	Dipstick, gearbox	64	
Arm rest	140	Carpet fastener	158	Dipstick, rear axle	94	
Ash tray	156	Cellulose paint	162	Distributor adaptor	20	
Axle assembly	94	Centre bead	123	Distributor assembly	126	
Axle shaft	96	Centre link rod	52	Door	134	
B			Centre tie rod	84	Door casing	138
Back light	146	Chain tensioner	10	Door handle	136	
Back plate	102	Chain, timing	16	Draught excluder	159	
Banjo connection	102	Chain wheel	12	Driving mirror	160	
Battery	126	Change speed details	74	Drop arm	92	
Body sections	132	Chassis frame	100	Dynamo	127	
Bonnet buffer	159	Chassis harness	130	Dynamo fan	30	
Bonnet details	123	Choke tube	44	Dynamo mounting	30	
Boot lid assembly	152	Clevis joint	78	E		
Bracket		Clock	124	Electrical details	126	
Abutment	66	Clutch	48	Element guide	24	
Accelerator control	54	Clutch operation	50	Engine	6	
Air silencer	40	Clutch rod assembly	52	Engine plates	10	
Anchor	123	Combustion head	8	Engine mounting	64	
Bumper	100	Compensator unit	115	Exhaust manifold	32	
Carburettor control	38	Condenser	126	Exhaust pipe	115	
Change speed	78	Connecting rods	14	Exhaust silencer	115	
Clutch housing	50	Constant gear	56	Exhaust valve	18	
Door check	140	Constant pinion	60	Extension gearbox	62	
Dynamo	30, 127	Contact set	126	Extension push rod	110	
Exhaust pipe	116	Control box	128	F		
Fog lamp	130	Control		Fan	20	
Footrest	154	Accelerator	54	Field coil	128	
Front suspension	82	Cable	54	Filler cap, petrol tank	122	
Handbrake	112	Carburettor	38	First and reverse lever	76	
Jacking	100	Choke	125	First speed gear	56	
Reinforcement	116	Steering	93	Flap valve	32	
Shock absorber	100	Control shaft	78	Flex hose	110	
Silencer	116	Countershaft	56	Float chamber	44	
Starting shaft	160	Crankshaft	12	Floorboard and carpet details	156	
Steady stay	80	Cross shaft	76	Flywheel	20	
Steering	86	Crown wheel	96	Fog lamp	130	
Steering bell crank	88	Cubby door	156	Front hub	82	
Toe board	156	Cylinder block	6	Front number plate	118	
Trunnion	74	Cylinder boot, brakes	104	Front road spring	90	
Brake drum	84	Cylinder head	8			
Brake pedal	50	Cylinder liner	6			
Brakes	102	Cylinder liner	6			
		Cylinder piston, brakes	104			

Front seat details	page	154
Front suspension	82	

G

Gauge, oil pressure	124
Gauge, petrol, in tank	122
Gauge, petrol, on panel	124
Gearbox	56
Gearbox cover	132, 156
Gear shift mechanism	74
Grille	118

H

Handbrake	brake operation	112
Handbrake piston	108	
Headlamp	128	
Heater details	161	
Horn	130	
Horn button	93	
Horn push	130	
Hose and water connections	38	
Hub cap	84	
Hub cap cover	148	
Hydraulic pipes	110	
Hydraulic piston	108	

I

Ignition	22
Ignition coil	128
Ignition switch	125
Impellor	28
Instrument panel	156
Instruments on dash	124

L

Lamp	
Fog	130
Head	128
Roof	160
Side	129
Licence holder	160
Light unit	128
Luggage strap	160

M

Mainshaft	58
Manifold details	32
Mask	102
Master cylinder, brakes	108
Micram adjuster	102

Mirror, driving	page	160
Mirror, vanity	160	
Miscellaneous details	160	
Mortice lock	152	
Motif, apron	148	

N

Oil	
Filter element	22
Filter sump section	16
Pressure gauge	124
Pump	16
Pump drive shaft	20
Shock absorber	88
Orange fluid	112
Outer tie rod	86
Overdrive unit	66

P

Paint details	162
Panel harness	130
Panel, roof	134
Petrol jet, G.S.	44
Petrol and oil pipes	120
Petrol pump	26
Petrol tank	122
Pinion and barrel assembly	128
Piston and piston rings	14
Plug, sparking	22
Pressure ring	14
Primer handle	26
Propellor shaft	98
Pull-off link	50
Pump	
Oil	16
Petrol	26
Water	28
Purolator head	24

Q

Quarter lights details	146
-------------------------------	-----

R

Radiator	
Details	118
Hose	34
Medallion	118
Motif	117
Rear axle	94
Rear brake rod	115
Rear bumper	120

Rear compartment details	page	152
Rear hub	98	
Rear road spring	100	
Rear seat details	154	
Rear shock absorber	101	
Rear wing details	152	
Rebound buffer	88	
Regulator, window	136	
Reverse gear	58	
Reverse wheel assembly	56	
Rheostat	126	
Rim bellisher	148	
Road wheel	148	
Road wheel stud	98	
Rocker cover	8	
Rocker pedestal	18	
Rocker shaft	92	
Roof panel	134	
Rope pull	160	
Rubber heel mat	158	
Rubber plug and grommet	159	

S

Scraper ring	14
Screen wiper switch	125
Selector fork	62
Selector control shaft	74
Service kit	98
Shackle arm	101
Shock absorber	88
Silent block	100
Spare wheel clamp	152
Sparking plug	22
Speedo driven gear	64
Speedometer	124
Spring	
Anti-rattle	48
Auto advance	127
Bi-metal	32
Clutch	70
Front road	90
Main	120, 128
Plunger	62
Pull-off	52, 102
Pump	68
Rear road	100
Rocker	18
Return	108
Tensioner	106
Throttle	38
Thrust	48
Valve	68
Stabiliser bar	102

	page		page		page
Starter body	42	Sunwheel	70	V	
Starter hole door	118	Supplement No. 1	163	Vacuum unit	126
Starter jaw	12	Heater details	163	Valance assembly	148
Starter motor	127	Partition details	164	Valve gear and rocker	18
Starter switch	125	Rear carpets	163	Vanity mirror	160
Stator tube	93	T		W	
Steady stay	80	Tail exhaust pipe	115	Warning light	128
Steering bell crank details	88	Thermometer	124	Water elbow	36
Steering column control	126	Thermostat details	36	Water pipe hose	161
Steering lever	86	Throttle chamber	42	Water pump	28
Steering mounting	93	Tie rod assembly	88	Window regulator	136
Steering unit	92	Timing chain	16	Windscreen details	134
Stiffener bar	120	Timing cover	10	Wishbone	84
Stop light switch	112	Trafficator	129		
Stub axle	82	Transmission cover	156		
Stud, road wheel	82, 98	Tread plate	140		
Suction pipe	46	Tread strip	148		
Sump	10				

Reference to any part number is provided in the numerical index at the rear of parts list, page 165.

This index lists all parts in numerical sequence and shows the page number.